



*Personal Computer
Hardware Reference
Library*

IBM PC Compact Printer Connector Adapter

IBM PC Compact Printer Connector Adapter

6361517



Contents

Description	1
Specifications	3




Description


The IBM PC Compact Printer Connector Adapter is required to connect the 16-lead cable of the IBM PC Compact Printer to the 25-pin D-shell connector of an Asynchronous Communications Adapter or Alternate Asynchronous Communications Adapter.



Specifications

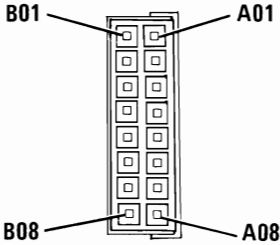

**Printer Cable End
of Connector Adapter**

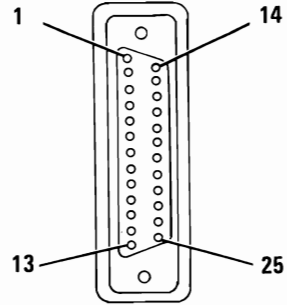

**System End of
Connector Adapter**

Pin	Description	Pin
-	Not Used	1
A04	Transmitted Data	2
A08	Receive Data	3
A03	Request To Send	4
A07	Clear To Send	5
A06	Data Set Ready	6
B02	Signal Ground	7
B03	Received Line Signal Detector	8
B04	+ Transmit Current Loop Data	9
B05	Not Used	10
B06	- Transmit Current Loop Data	11
B07	Not Used	12
B08	Not Used	13
A05	Not Used	14
	Not Used	15
	Not Used	16
	Not Used	17
	+ Receive Current Loop Data	18
	Not Used	19
A02	Data Terminal Ready	20
	Not Used	21
A01 Not Used	Ring Indicator	22
B01	Not Used	23
Not Used	Not Used	24
	Receive Current Loop Return	25

Notes:

